FIRST TEAM REBOUNDER ASSEMBLY INSTRUCTIONS - MADE IN USA

STEP 1

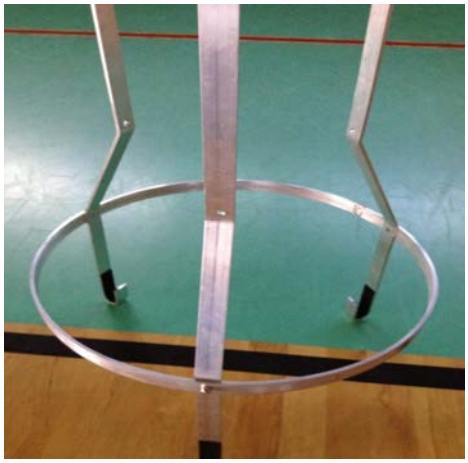

Insert 10-24 x 3/4" screw thru frame supports, Large Ring followed by washer and nylon lock insert nut.

STEP 2

Insert 10-24 x 3/4" screw thru frame supports, smaller middle ring followed by washer and nylon lock insert nut.

STEP 3

Remove screws from the Velcro Friction Ring. Insert 10-24 x 1/2" screws thru frame supports into velcro friction ring.

STEP 4

Install Left Chute On Velcro Friction Ring In Plastic Channel.

STEP 5

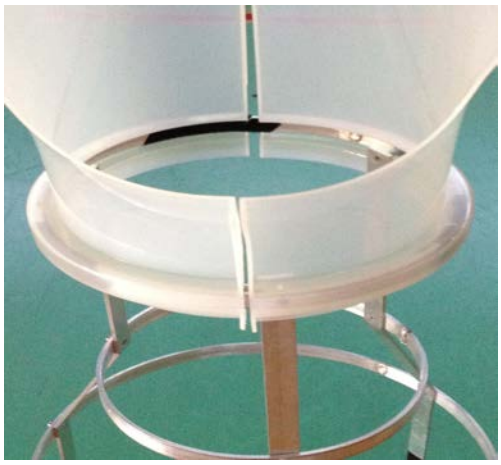

Install Right Chute On Velcro Friction Ring In Plastic Channel. Install (8) Plastic Thumbscrew's thru aligned holes and tighten with (8) thumbscrew nuts.

STEP 6

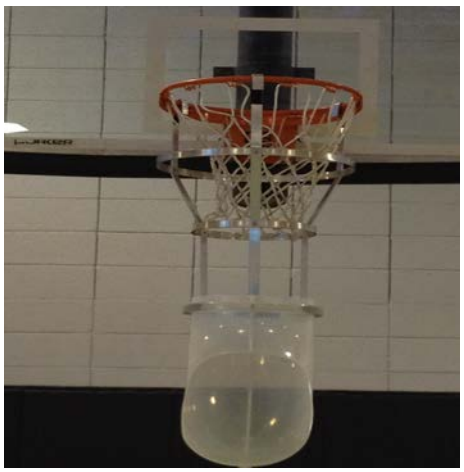

Install On Basketball Rim As Shown. Turn Plastic Chute To Any Position On The Basketball Court.

Note: Install (3) 1" Velcro Strips Inside Of The Three Hooks. Peel back the non sticky side and start sticking at the front inside hook slowly. Repeat install until velcro strip is fully attached inside.

Vibration Note: Check every 300-500 shots. Velcro Friction Ring Screws May Need To Be Tightened.